



Connections Detail : Vertical installation

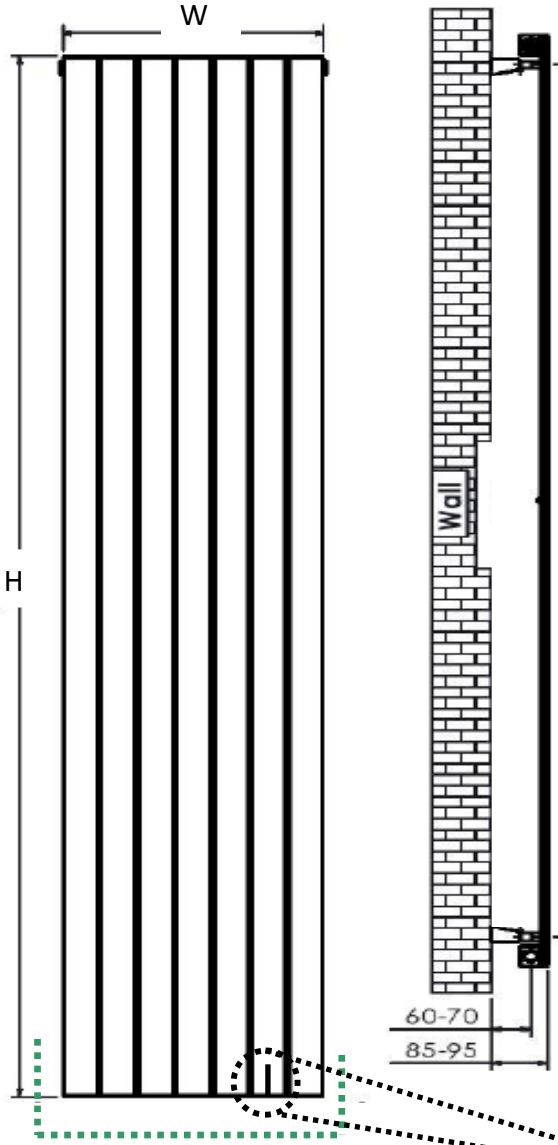

Pipe Centres = Width + valve centres
 ie: Width + 80mm with Standard RadCen Valves
 (PLEASE NOTE: Flow connection = Right hand side)

Connections Detail : Horizontal installation

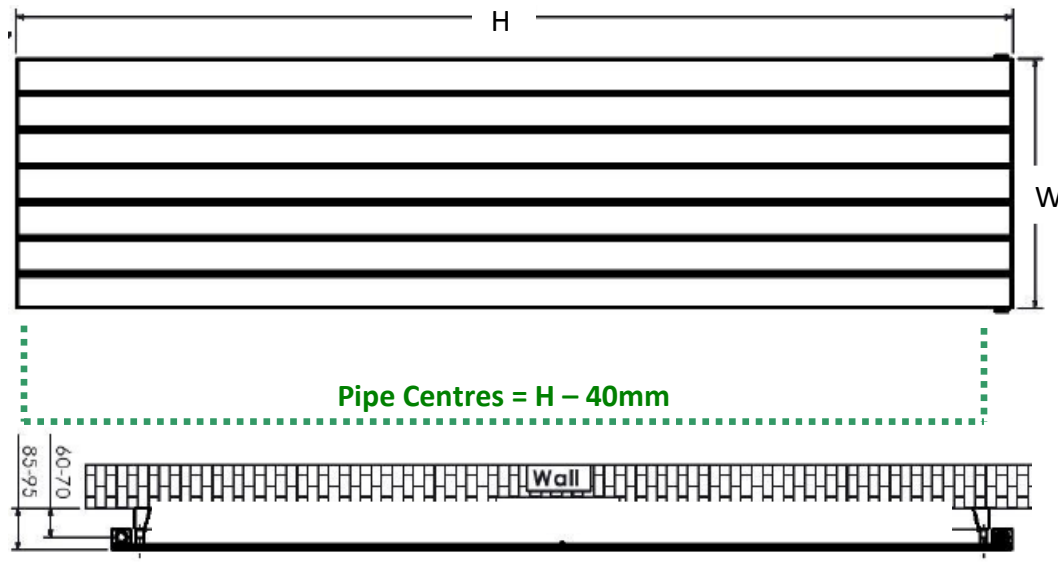


CODE	H	W	Depth	Projection	Power (watts)
Versatile 1808	1800	515	40	85-95	1926
Versatile 1807	1800	450	40	85-95	1685
Versatile 1806	1800	385	40	85-95	1444
Versatile 1805	1800	320	40	85-95	1204
Versatile 1804	1800	255	40	85-95	963
Versatile 1506	1500	385	40	85-95	1201
Versatile 1504	1500	255	40	85-95	801
Versatile 1208	1200	515	40	85-95	1281
Versatile 1204	1200	255	40	85-95	641
Versatile 1008	1000	515	40	85-95	854

Please note : Flow diverter must be removed with a screwdriver for horizontal installation


[Outputs: 90/70/20 Δt 60°C EN442]

[Dimensions in millimetres]

Radiator Centre Ltd : 2 Grand Parade, Polegate, East Sussex, BN26 5HG
 WWW.radiatorcentre.com : info@radiatorcentre.com : Tel 01323 486848 : Fax 01323 486687


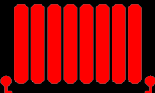


Connections Detail : Vertical installation
(Optional extra : 90MF connection)

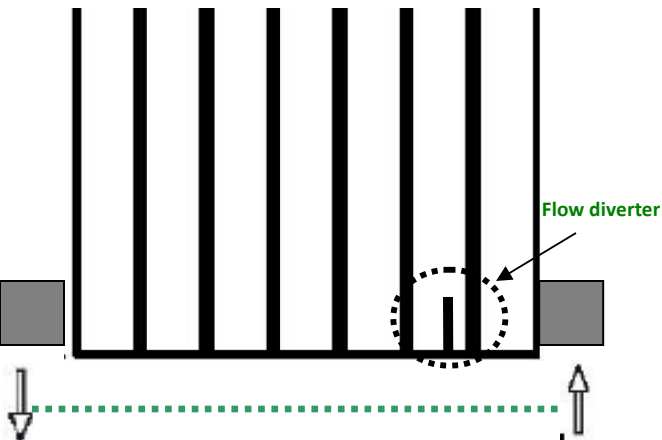

Optional 90MF Connections create downward facing connections @ W + 40mm (Overall clearance inc 90MF block = W + 70mm)
(PLEASE NOTE: Flow connection = Right hand side)


Bracket Detail :

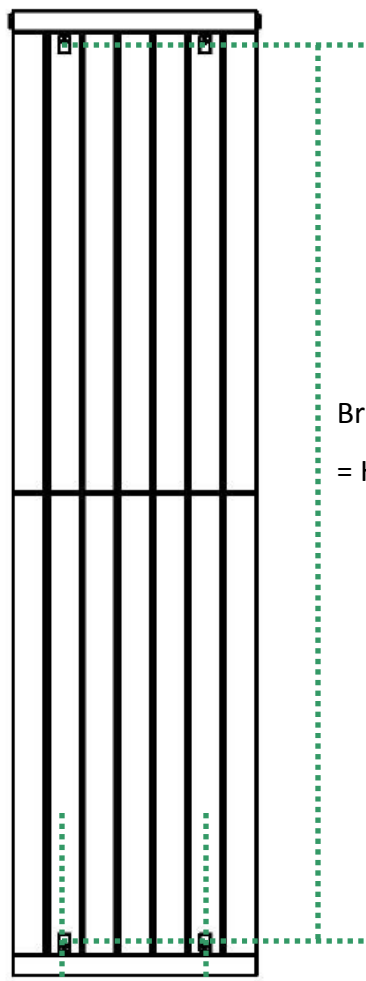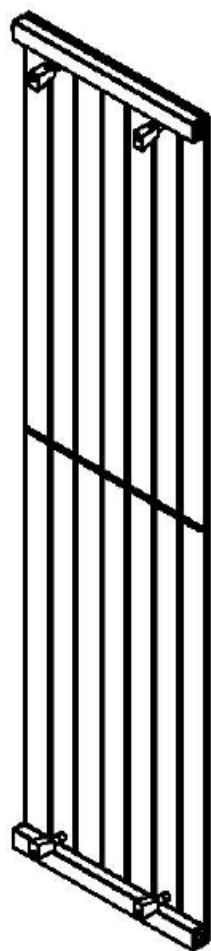


Bracket Centres :
= H - 114mm

Bracket Centres :
= W - 60mm

Bracket Assembly

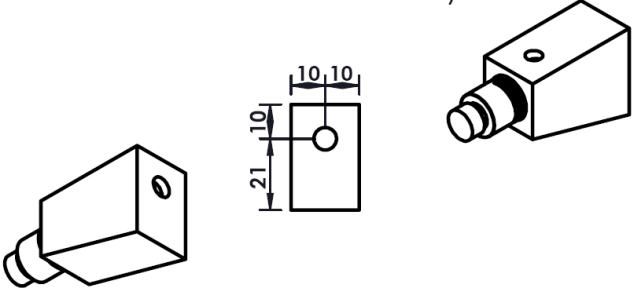

Please note :
Flow diverter
must be
removed with a
screwdriver for
horizontal
installation

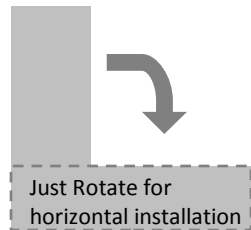

Just Rotate for
horizontal installation

[Outputs: 90/70/20 Δt 60°C EN442]

[Dimensions in millimetres]

Radiator Centre Ltd : 2 Grand Parade, Polegate, East Sussex, BN26 5HG
WWW.radiatorcentre.com : info@radiatorcentre.com : Tel 01323 486848 : Fax 01323 486687